

2023-09-28, INITIAL SUBMITTAL 2024-02-01, CITY COMMENTS 2024-04-17, CITY COMMENTS 4 2024-05-20, FOR APPROVAL

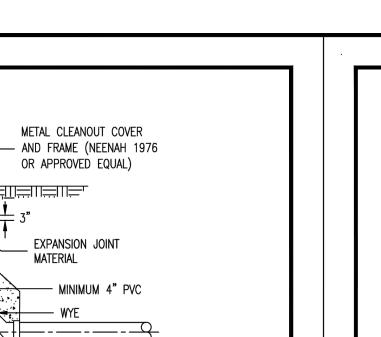

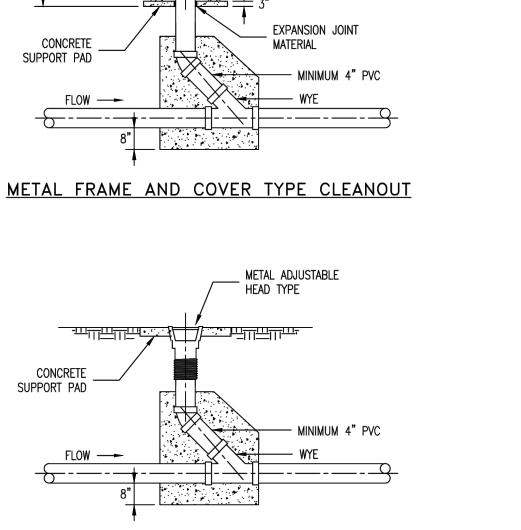

OR APPROVED EQUAL)

THREADED PLUG —

CONCRETE SUPPORT PAD


CONCRETE _ SUPPORT PAD


ADJUSTABLE HEAD TYPE CLEANOUT


Creek


SEWER LATERAL


CLEANOUT DETAIL

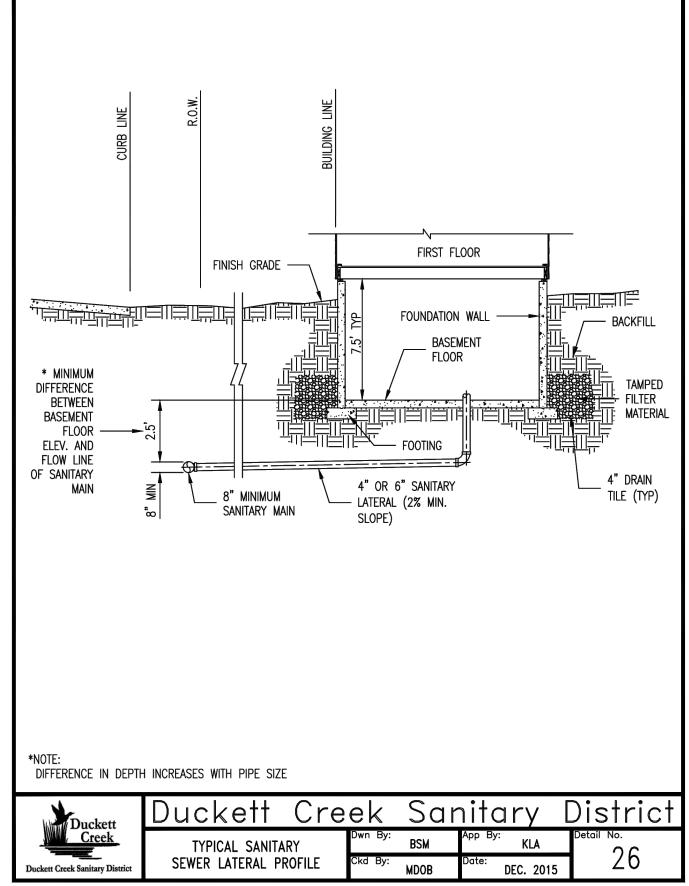


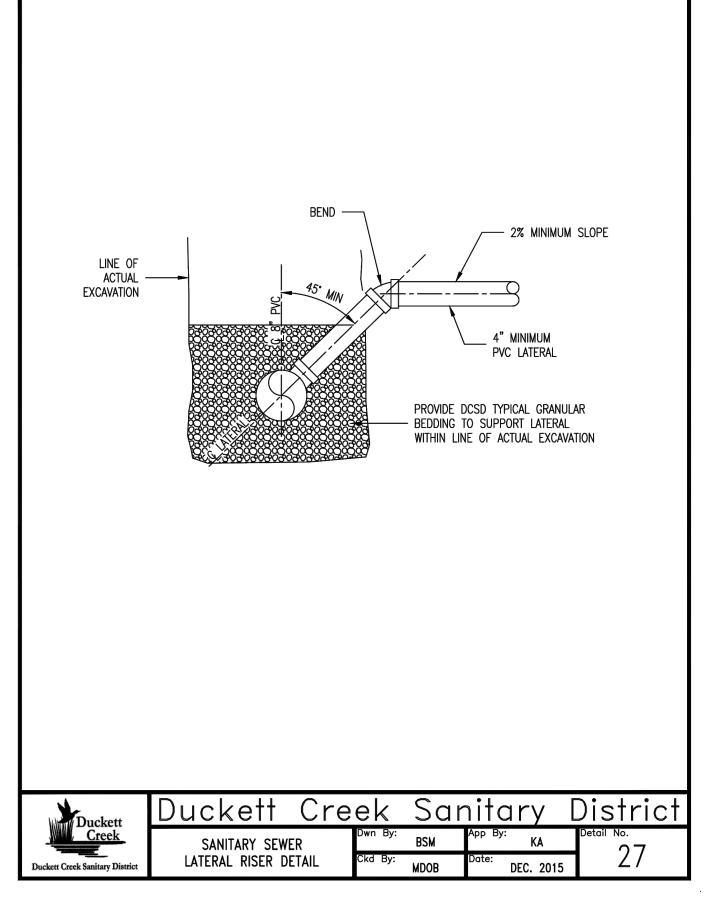

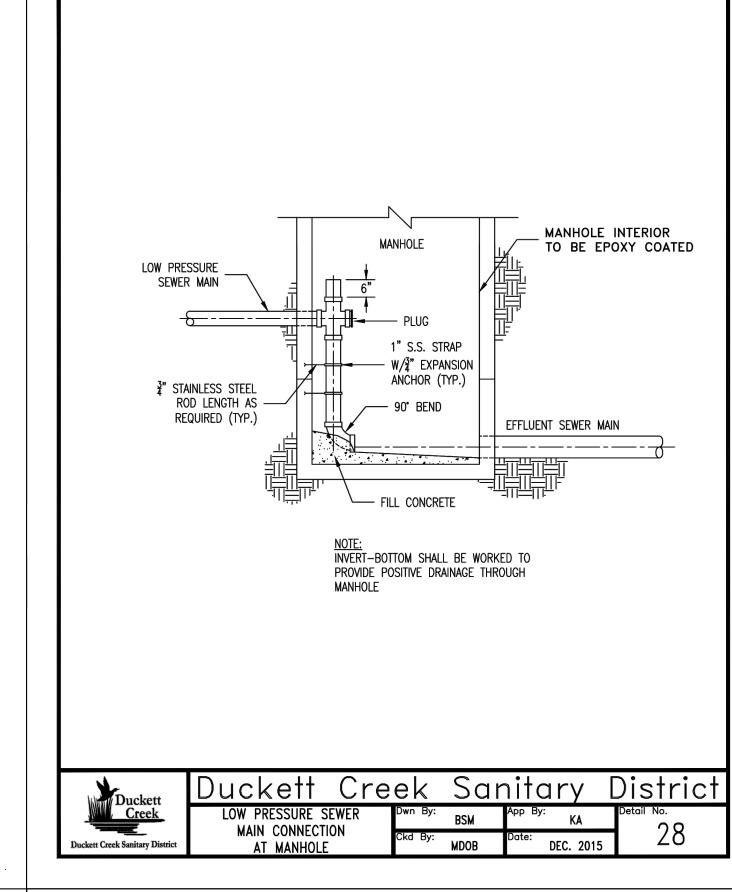

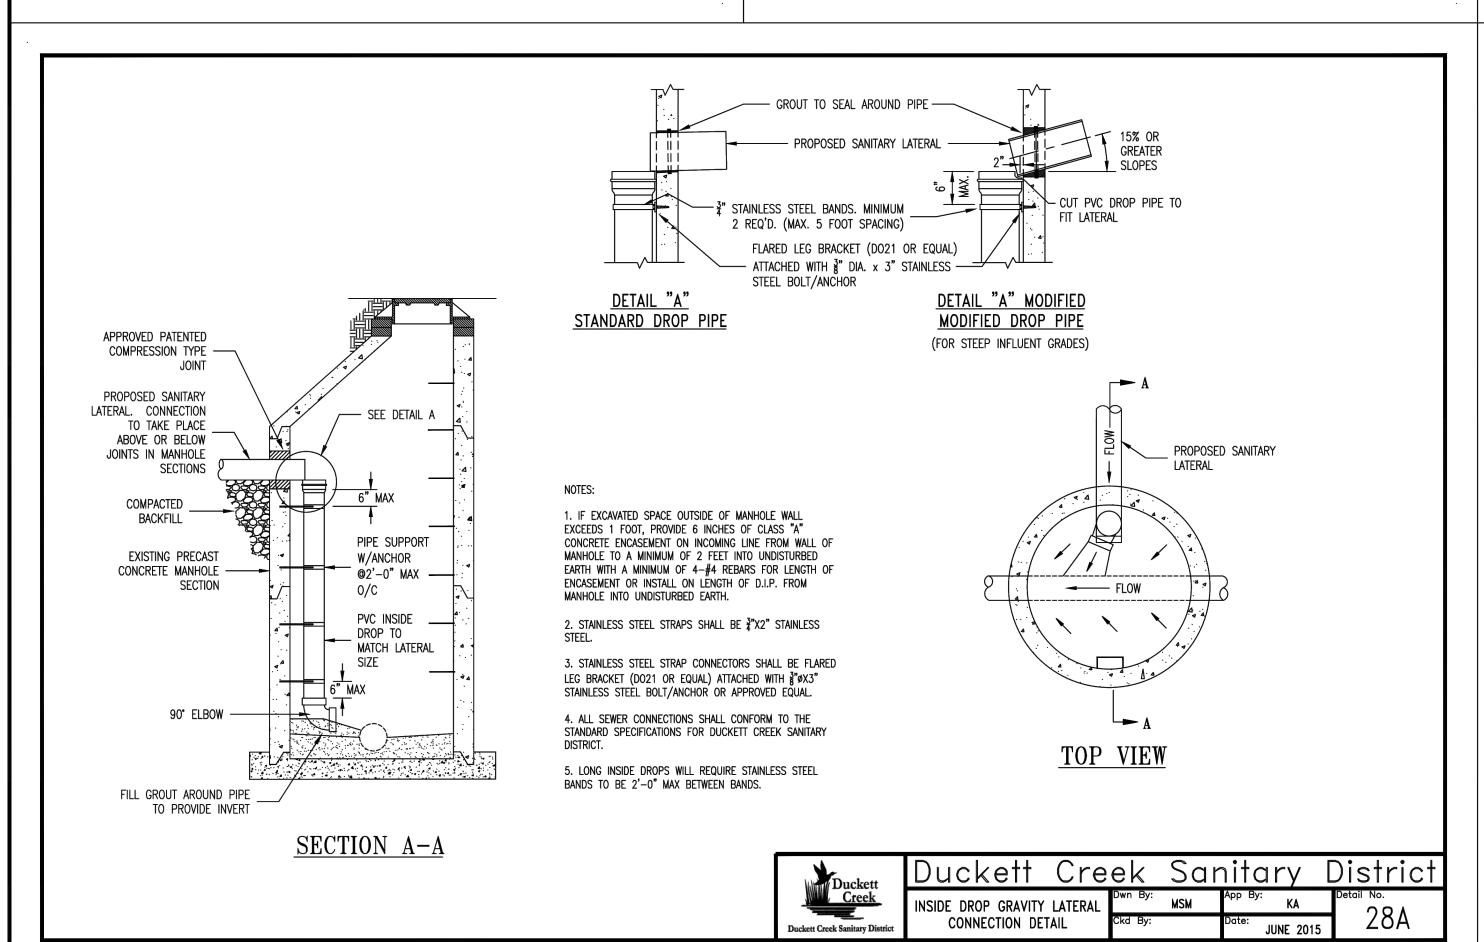

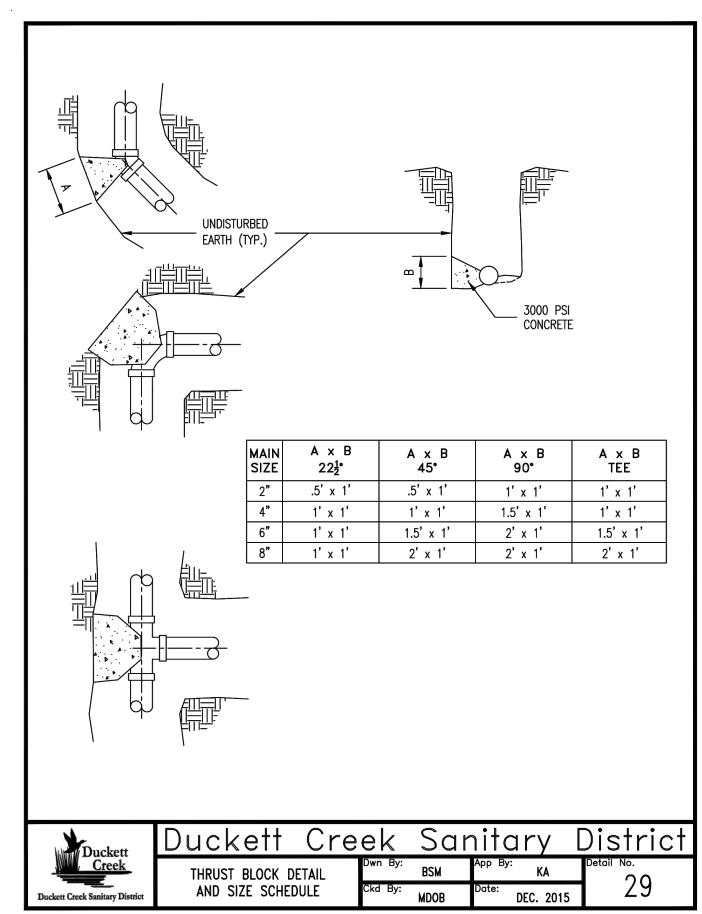

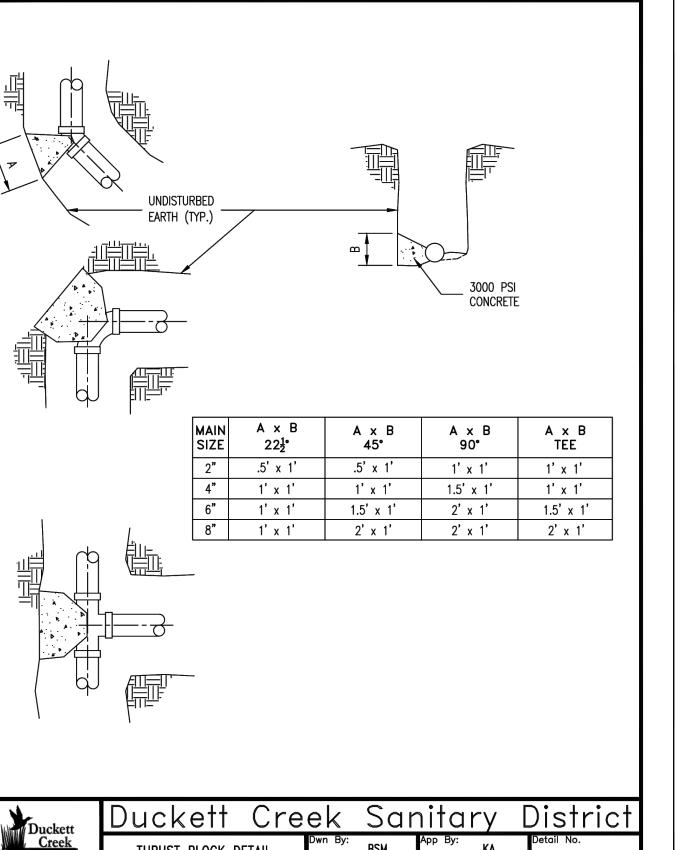





1. Center the pipe, cable or conduit in wall opening or casing. Make sure the pipe will be adequately supported on both ends. LINK-SEAL® modular seals are not intended to support the weight of the pipe.

socket allen head or off-set wrench ONL more than 4 turns at a time. Continue in a clockwise manner until links have been conformly compressed. (Approx. 2 or 3 start at 12 o'clock. Do not tighten any bo

Loosen rear pressure plate with nut just enough so links move freely. Connect both ends of belt around the pipe.

3. Check to be sure all bolt heads are facing

<u>not</u> remove links if extra slack exists.

be stretched.

NOTE: On smaller diameter pipe, links may need to

4. Slide belt assembly into annular space. For larger size belts, start inserting LINK-SEAL®

modular seal assembly at the 6 o'clock position and work both sides up toward the

12 o'clock position in the annular space.

the installer. Extra slack or sag is normal. D

5a.LS-325 through LS-650 Using a hand socket or off-set wrench ONLY, start at 12 o'clock. Do not tighten any bolt more than 4 turn at a time. Continue in a clockwise mani until links have been uniformly compre-(Approx. 2 or 3 rotations).

5. Make 2 or 3 more passes at 4 turr per bolt MAXIMUM, tightening all bo clockwise until all sealing elements "bulge" around all pressure plates. On type 31 stainless steel bolts, hand tighten ONI without power tool.

> 7. If the seal doesn't appear to be correct using the instructions provided, call GPT at 1-800-423-2410.




Installation Notes: The LINK-SEAL* modular seal bolt heads are usually recessed below the wall opening or the edge of casing pipe and

therefore a socket or offset wrench must be used. LINK-SEAL® Modular Seal - Do's

Make sure pipe is centered.

- 2. Install the belt with the pressure plates evenly spaced. 3. Install the exact number of links indicated in sizing charts. 4. Check to make sure pipe is supported properly during backfill
- 5. Make sure seal assembly and pipe surfaces are free from
- 6. For tight fits, use non-polluting liquid detergent to assist

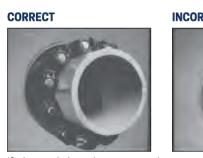

If the seal doesn't appear to be correct using the techniques provided, Call GPT at 1-800-423-2410. ALWAYS WEAR PPE WHEN USING LINK-SEAL® MODULAR SEALS

LINK-SEAL' Modular Seal - Don'ts

- 1. Don't Install the belt with the pressure plates aimed in irregular directions. (Staggered)
- 2. Don't Install LINK-SEAL® modular seals where weld-beads or other irregular surfaces exist without consideration of the
- operations. **NOTE**: LINK-SEAL® modular seals are not intended to

 3. Don't torque each bolt completely before moving on to the next. sealing requirements.
 - 4. Don't use high speed power tools (450 rpm or more)
 - 5. Do not use power tools on LINK-SEAL* modular seal 316 stainless
 - 6. Don't use grease installing LINK-SEAL* modular seals.

Hand Tools: Review provided chart below. (Tools not provided.) Tools can be purchased from hardware store, auto parts store, or home

LINK-SEAL" Model	Tool Size/ Type Req.	Bolt Head Type
LS-200, LS-275	4mm, Allen	9
LS-300, LS-315	6mm, Allen	
LS-325, LS-340, LS-360	13mm, Hex	
_S-400, LS-410, LS-425, LS-475	17mm, Hex	
LS-500, LS-525, LS-575	19mm, Hex	
LS-615	30mm, Hex	
LS-650	19mm, Hex	

P+Z No. 21-004994 **City No.** 21-011444 05-20-2024 Date: **Job No.** 20-09-327

Date: 05-20-2024 Michael G. Boerding

License No. MO E-28643 Professional Engineer

S

SD

Page No.