

No.	Interface location	Coordinates of interface points [ft]					
		x	z	x	z	x	z
5		0.06	-4.50	0.97	-4.50		
6		-2.68	-9.00	0.70	-9.00	0.70	-7.50
		0.83	-7.50	0.83	-6.00	0.97	-6.00
		0.97	-4.50				
7		0.97	-6.00	32.80	-6.00		
8		-32.80	-11.50	-3.31	-11.50	-3.31	-10.50
		-2.81	-10.50	-2.81	-9.00	-2.68	-9.00
		-2.68	-8.50				
9		0.70	-9.00	2.19	-9.00		
10		-2.81	-10.50	2.19	-10.50	2.19	-9.00
11		2.19	-10.50	2.69	-10.50		