

Interface

No.	Interface location	Coordinates of interface points [ft]					
		x	z	x	z	x	z
1		-32.80	-16.79	-7.87	-8.50	-0.96	-6.20
		-0.96	-6.00	-0.82	-6.00	-0.82	-4.50
		-0.69	-4.50	-0.69	-3.00	-0.55	-3.00
		-0.55	-1.50	-0.42	-1.50	-0.42	0.00
		0.00	0.00	3.00	0.75	35.00	0.75
2		0.00	0.00	0.00	-0.42	1.92	-0.42
3		-0.69	-4.50	1.65	-4.50	1.65	-3.00
		1.78	-3.00	1.78	-1.50	1.92	-1.50
		1.92	-0.42				
4		1.92	-1.50	35.00	-1.50		
5		1.65	-4.50	2.55	-4.50	2.55	-6.00
		4.04	-6.00				
6		-0.96	-7.50	4.04	-7.50	4.04	-6.00
7		-7.87	-8.50	-1.46	-8.50	-1.46	-7.50
		-0.96	-7.50	-0.96	-6.20		