

INSTALLATION PROCEDURE:

TEE SIZE: 4" 6" 8" 10" 12" 15" 1. CORE THE PROPER SIZE HOLE. BIT SIZE: 41" 61" 101" 121" 1511"

2. INSERT THE RUBBER SLEEVE (1) IN THE CORED HOLE WITH THE GOLD VERTICAL LINE ON THE RUBBER SLEEVE (2) FACING TO THE SIDE OF THE MAIN LINE, THE UPPER SEGMENT SHOULD BE ON TOP OF THE WALL OR RIB AND THE LOWER SEGMENT (PVC, PROFILE WALL, AND POLYETHYLENE PIPE ONLY) SHOULD BE ON THE INSIDE OF THE PIPE

3. APPLY THE INSERTA TEE SOLUTION SUPPLIED TO THE INSIDE OF THE RUBBER SLEEVE AND TO THE OUTSIDE OF THE PVC HUB ADAPTER. CAUTION - DO NOT USE AN OIL BASED LUBRICANT.


4. PLACE THE PVC HUB ADAPTER (3) INTO THE RUBBER SLEEVE. MAKE SURE THAT THE RED VERTICAL LINE (4) ON THE PVC HUB ADAPTER IS IN LINE WITH THE GOLD VERTICAL LINE (2) ON THE RUBBER SLEEVE. 5. PLACE THE 2x4 BOARD ONTO THE TOP OF THE PVC HUB ADAPTER.


6. THE RED HORIZONTAL LINE (5) AT THE TOP OF THE HUB ADAPTER IS A DEPTH MARK. THIS TELLS THE INSTALLER HOW FAR TO DRIVE THE ADAPTER INTO THE RUBBER SLEEVE. DRIVE THE PVC HUB ADAPTER INTO THE RUBBER SLEEVE TO WHERE THE HORIZONTAL RED LINE (5) ON THE PVC HUB ADAPTER (3) MEETS THE TOP OF THE RUBBER SLEEVE (6)


7. PLACE THE STAILESS STEEL BAND (7) AROUND THE TOP OF THE RUBBER SLEEVE AND TIGHTEN DOWN. 8. INSTALL PIPE IN NORMAL MANNER


Duc	KETT	CREEK	SANITARY	Dis	TRICT
INSERT				App By:	-

INSERTA TEE	Dwn By: BSM	App By: KLA	Detail No.
DETAILS AND SPECIFICATIONS	Club By: MDOB	Dote: 1-4-01	20B

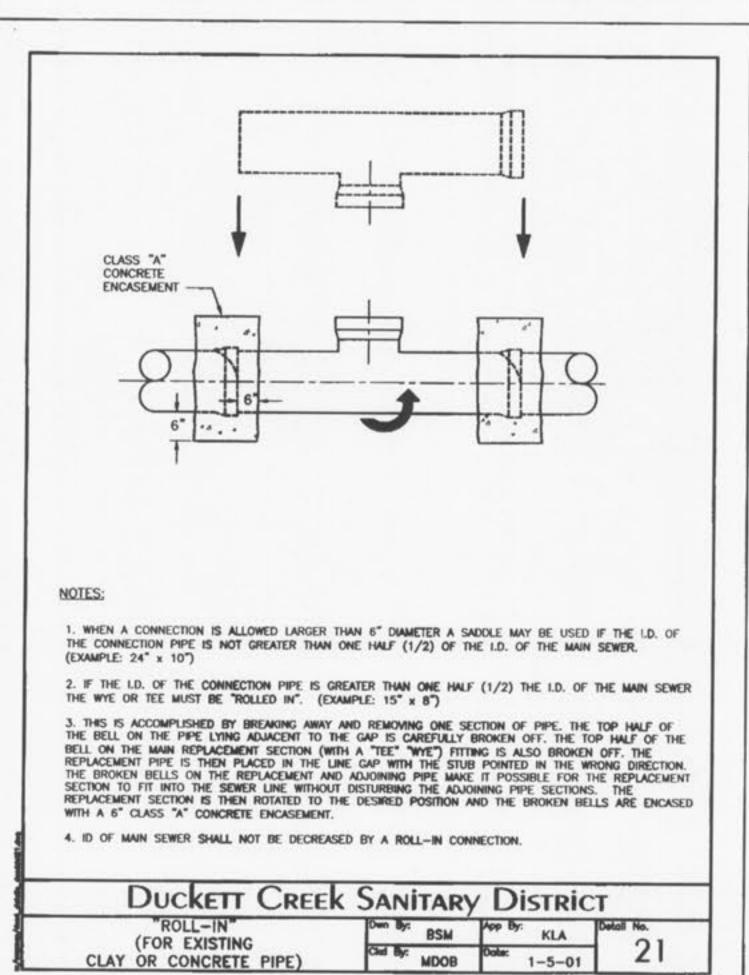

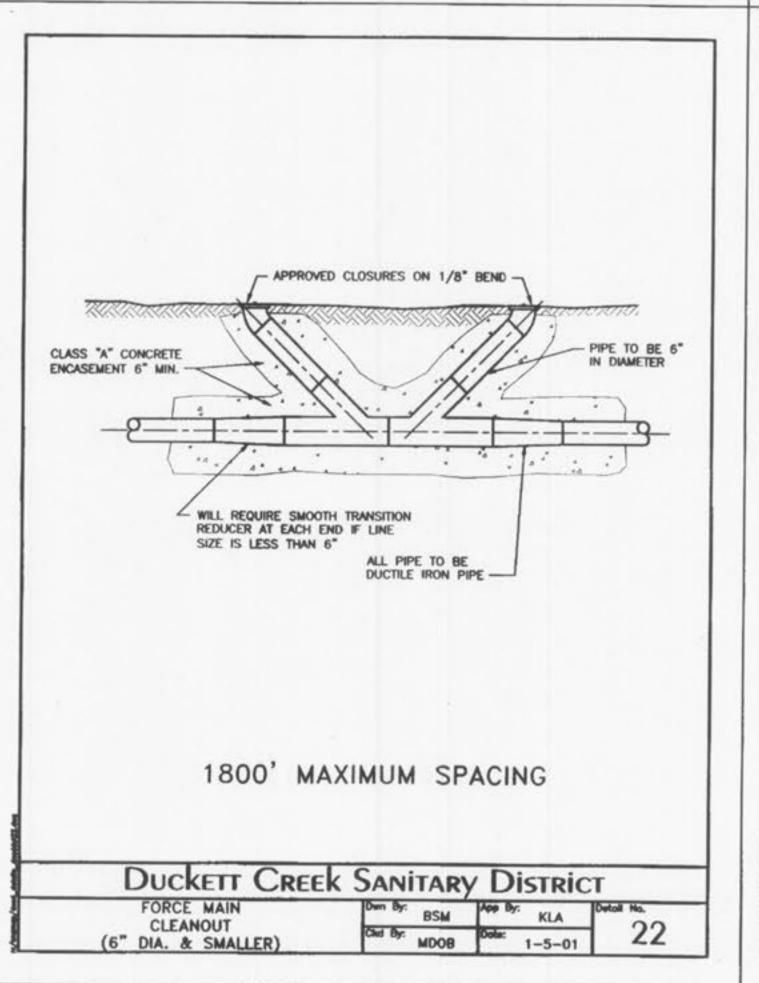

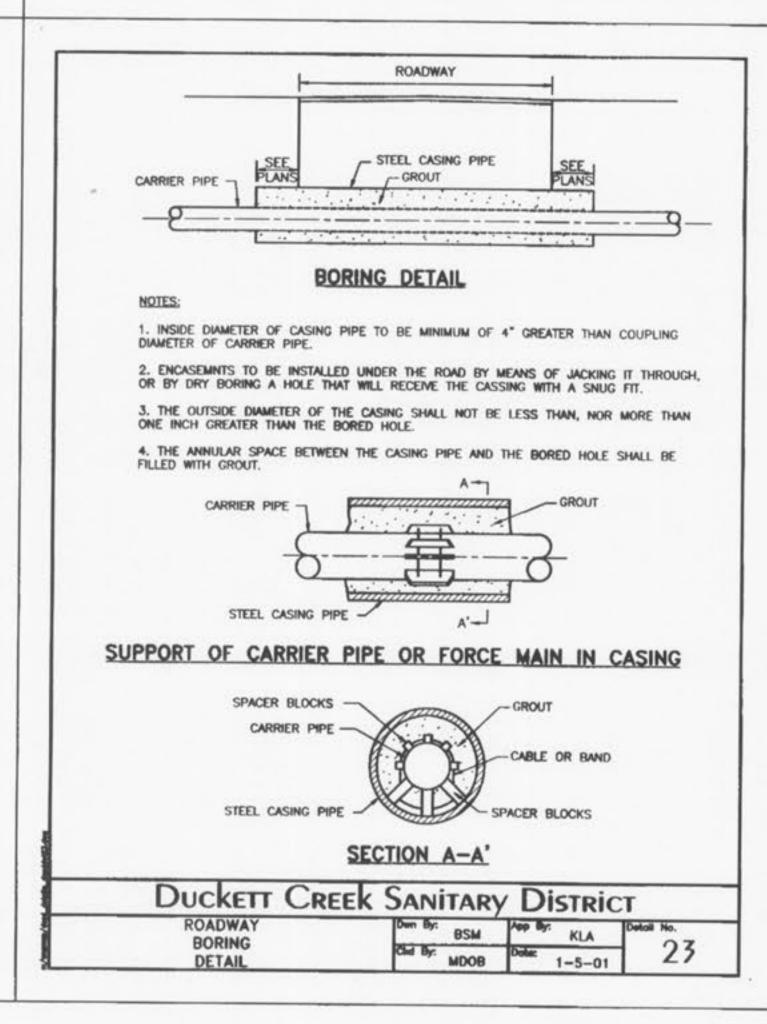

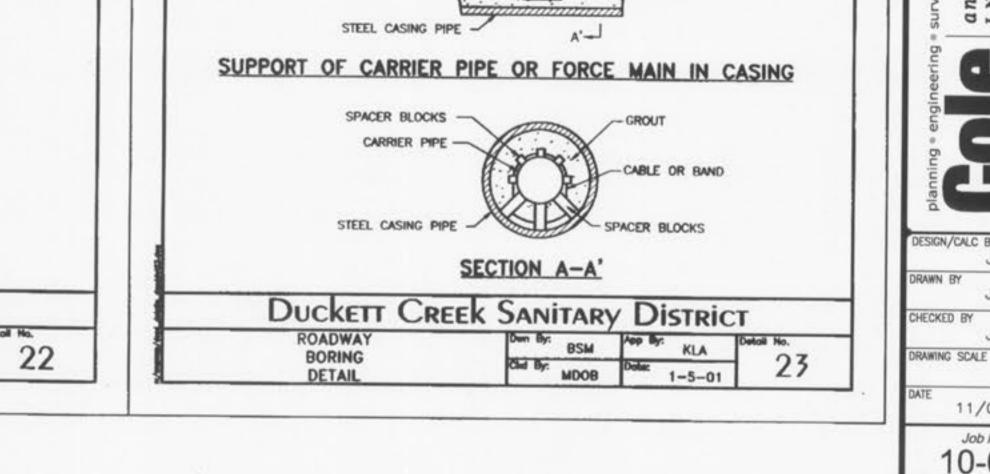

NOTE: THE DETAILS SHOWN HEREIN ARE FOR THE PURPOSE OF PRIVATE CONSTRUCTION ONLY. PUBLIC CONSTRUCTION WILL REQUIRE STRICT ADHERENCE TO THE DETAILS PUBLISHED BY DUCKETT CREEK AND ST. CHARLES COUNTY.

SCO NA

SOD

SO W

a H

ESIGN/CALC BY

RAWN BY

JKW

JKW

JTR

11/03/10

Job Number 10-0038

Sheet Number

SANITARY