


ON THE PVC HUB ADAPTER IS IN LINE WITH THE GOLD VERTICAL LINE (2) ON THE RUBBER SLEEVE. 5. PLACE THE 2x4 BOARD ONTO THE TOP OF THE PVC HUB ADAPTER.

6. THE RED HORIZONTAL LINE (5) AT THE TOP OF THE HUB ADAPTER IS A DEPTH MARK. THIS TELLS THE INSTALLER HOW FAR TO DRIVE THE ADAPTER INTO THE RUBBER SLEEVE. DRIVE THE PVC HUB ADAPTER INTO THE RUBBER SLEEVE TO WHERE THE HORIZONTAL RED LINE (5) ON THE PVC HUB ADAPTER (3) MEETS THE TOP OF THE RUBBER SLEEVE (6)

7. PLACE THE STAILESS STEEL BAND (7) AROUND THE TOP OF THE RUBBER SLEEVE AND TIGHTEN DOWN. 8. INSTALL PIPE IN NORMAL MANNER.

Duckett Creek Sanitary District			
INSERTA TEE DETAILS AND SPECIFICATIONS	Dwn By: BSM	App By: KLA	Detail No.
	Click By: MDOB	Dots: 1-4-01	20B

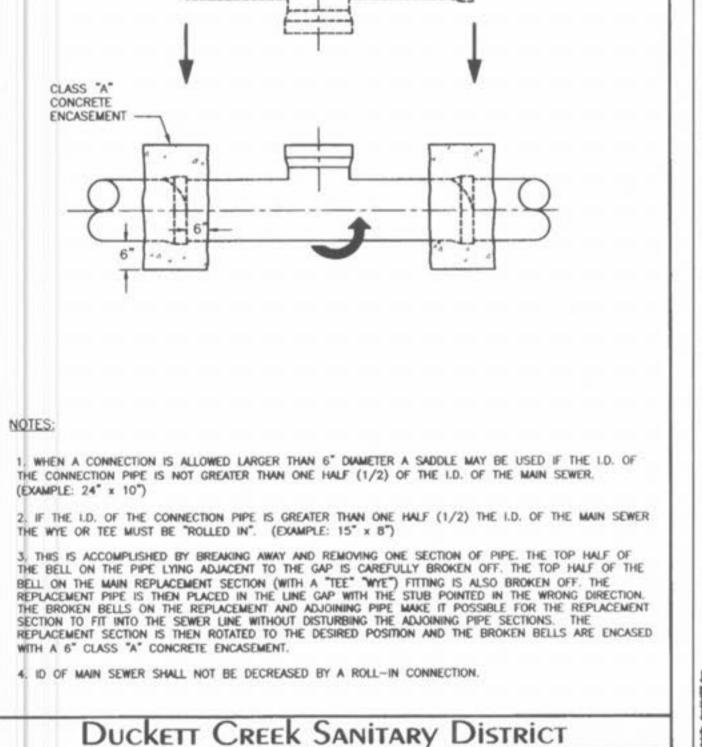

KLA


1-5-01


MDOB

ROLL-IN

(FOR EXISTING

CLAY OR CONCRETE PIPE

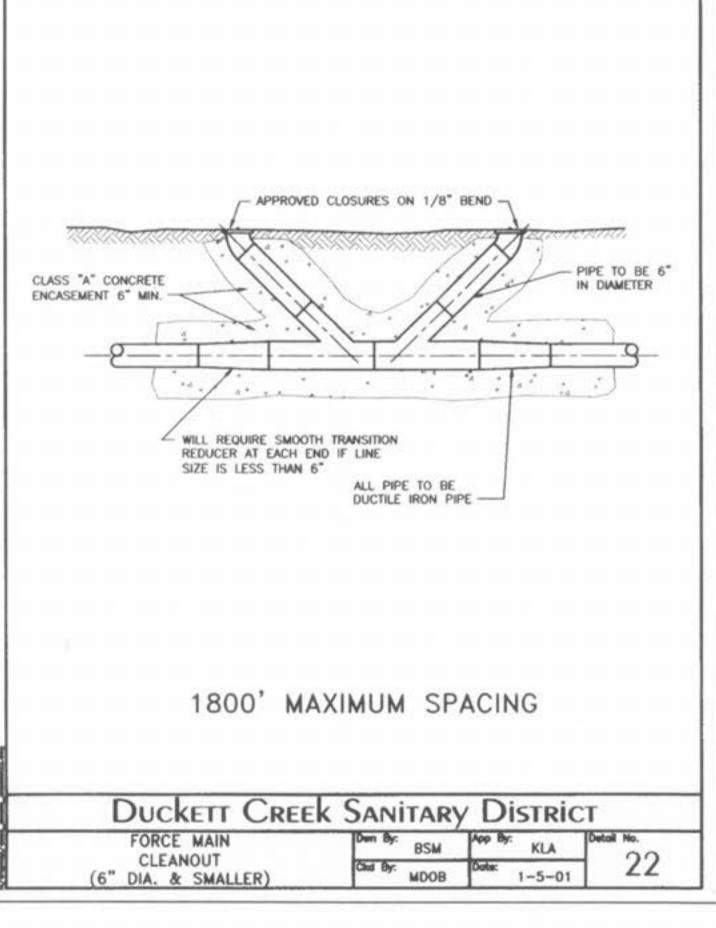

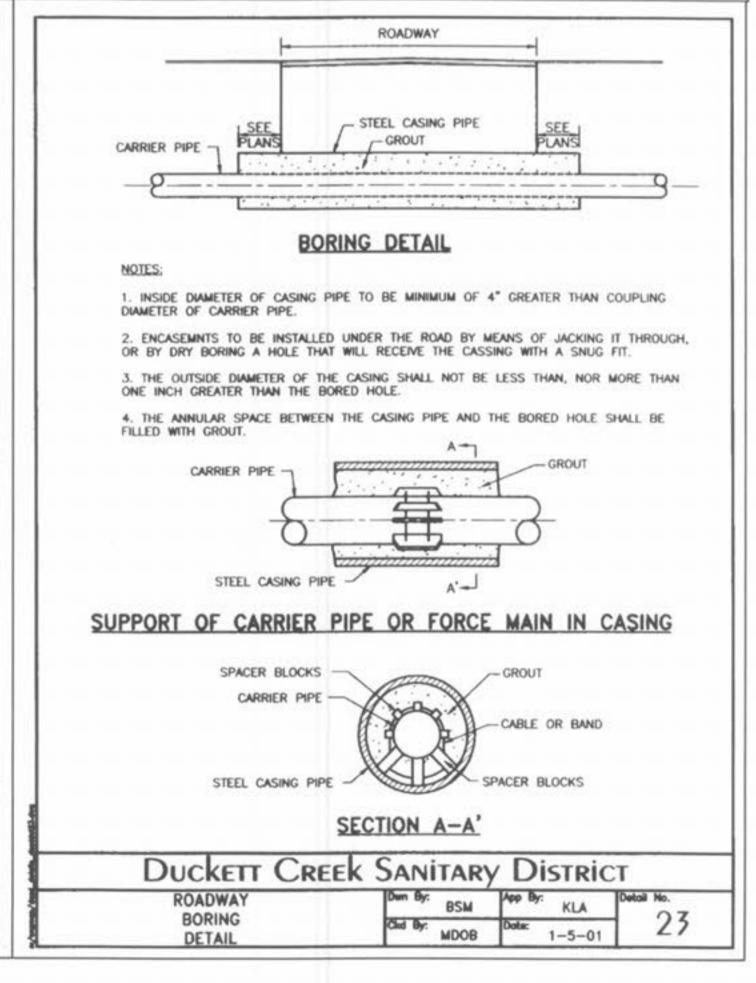



S

MMIT

ENGINEERS AUTHENTICATION The responsibility for professional

engineering liability on this project is hereby limited to the set of plans authenticated by the seal, signature, and date hereunder attached. Responsibility is disclaimed for all other engineering plans involved in this project and specifically excludes revisions after this date unless PICKETT, RAY & SILVER, INC.

DRAWN DATE 6-29-0 CHECKED DATE D. W.D. 6-29-0

> FIELD BOOK

WYNDGATE DUCKETT CREEK SANITARY SEWER DETAILS SHEET 167 OF 174

C Copyright 2004 by Pickett, Roy & Silver Inc.

PROJECT # 01267.SUPO.02R

TASK # 2